



# Bose SoundLink Color Outer Casing Replacement

Use this guide to remove or replace the outer casing of your Bose SoundLink Color.

Written By: Michael Thorn



## INTRODUCTION

This guide will show how to remove the 4 screws that are holding the two parts of the casing together and how to separate the casing for replacement.

---



### TOOLS:

- [Tamper Resistant TORX Plus TR Bit](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
  - [Metal Spudger](#) (1)
-



## Step 1 — Outer Casing



**i** Four round, plastic plugs are located on the back of the device.

- Using a metal spudger, carefully pry up the plastic covers.

**!** The covers are all glued on, so be careful not to scar the casing when prying them off. If possible, use a spudger or plastic opening tool to remove them.

## Step 2



- Remove the four 1.8 cm Torx Plus TR screws from the outer case.

## Step 3



- Carefully open up the casing.
- ☑ The top button pad may need to be re-glued upon installing the new casing.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-11 03:45:59 PM.